FREE021 ‘Dad’ fridge magnets/ornaments

By Sue Mey
www.scrollsawartist.com

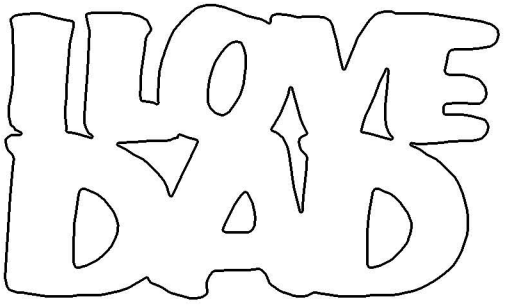

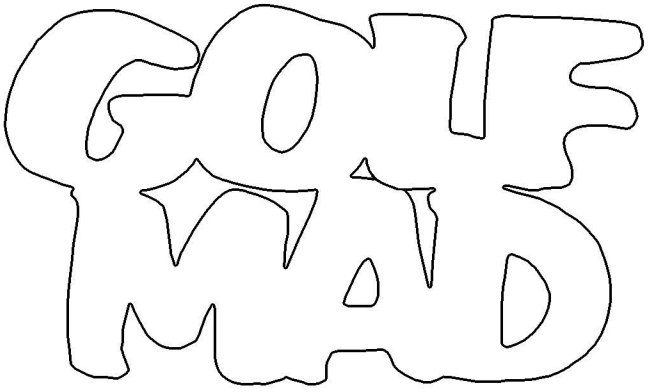

Options:
Fridge magnets: Apply self adhesive magnet sheeting to the back of 1/4" (6mm) hardwood or plywood. Drill the blade entry holes and make all the cuts. Sand the pieces by hand. Apply clear spray varnish to the front and sides.
Ornaments:
Use 1/8" or 1/4" (3mm or 6mm) hardwood or plywood.
Drill the blade entry holes and make all the cuts. Sand the pieces by hand. Apply clear spray varnish. Drill one or two small holes in the top of each ornament for threading the string.

Scrollsawartist.com